

WOODEN LOUVERED GUARD


CG-750 SERIES

INSTALLATION INSTRUCTIONS



STEP 1

Arrange left and right side panels and front panel together, with the arrows pointing outwards.

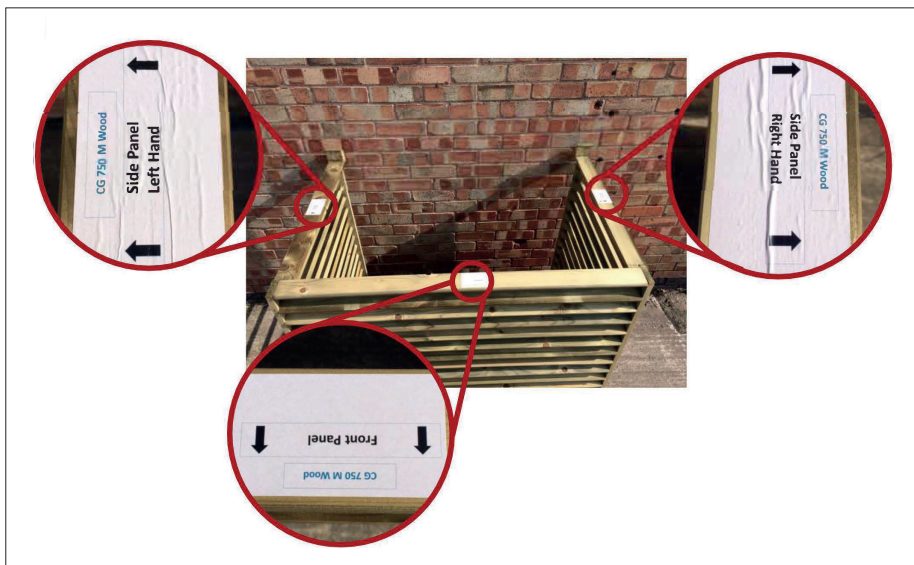


STEP 2

Using 3 long screws on outside and 2 short screws on inside, attach the left hand side panel to the front panel.




STEP 3

Place back strut onto rear side panels and secure with 2 short screws.

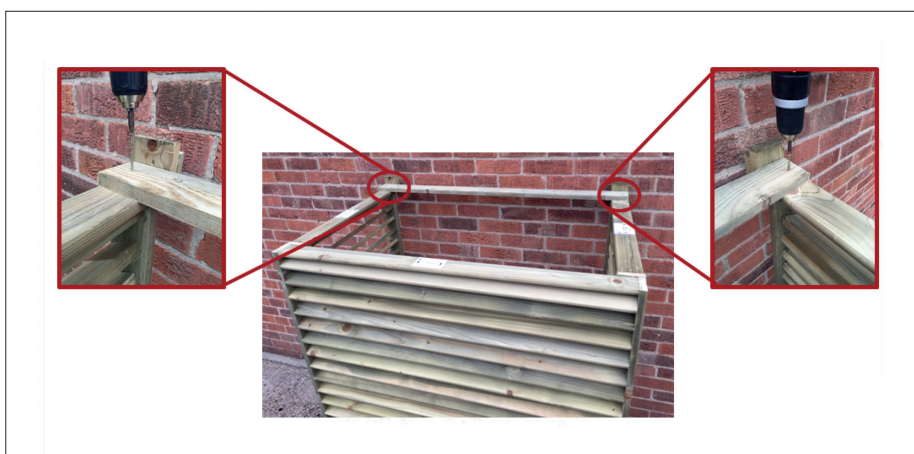

STEP 4

Place top panel on top of the other panels. Use 2 short screws, one for each rear corner, which will attach the side panels to the top panel.

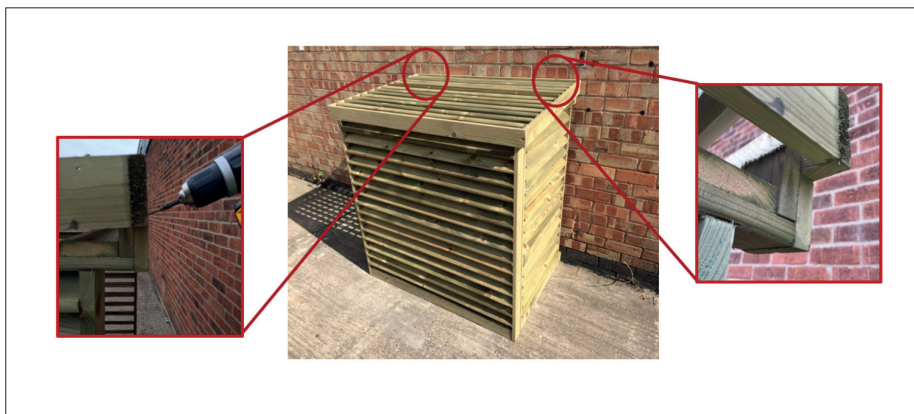

STEP 5

Overlap top panel on front panel. Use 2 long screws, one for each front corner, which will attach the front panel to the top panel.



MODELS

Part code	Size	Dimensions (external)			Dimensions (internal)			Weight
		Height front/back	Width	Depth	Height front/back	Width	Depth	
CG-750S-WOOD	Small	905 / 960mm	1275mm	865mm	850 / 890mm	1050mm	753mm	35kg
CG-750M-WOOD	Medium	1130 / 1185mm	1275mm	865mm	1075 / 1115mm	1050mm	753mm	40kg
CG-750M+WOOD	Medium+	1255 / 1310mm	1275mm	865mm	1200 / 1240mm	1050mm	753mm	44kg
CG-750L-WOOD	Large	1530 / 1585mm	1275mm	865mm	1475 / 1515mm	1050mm	753mm	51kg
CG-750L-INV-WOOD	Large Inverted	1130 / 1185mm	1630mm	865mm	1075 / 1115mm	1400mm	753mm	47kg
CG-750L+WOOD	Large+	1600 / 1655mm	1275mm	865mm	1545 / 1585mm	1050mm	753mm	57kg
CG-750L+-INV-WOOD	Large Inverted+	1635 / 1690mm	1630mm	865mm	1580 / 1620mm	1400mm	753mm	59kg